

Storage instructions

During transportation




➤ Protect the panels from the rain during transportation.




➤ Tear away the wrapping film from a parcel and check if some humidity or condensation have occurred. If so, do unwrap all the parcels but keep the plastic straps that pack the parcels.

At warehouse


➤ Store the panels horizontally and flat with minimum three supports equidistant and at the same height.

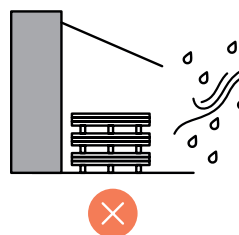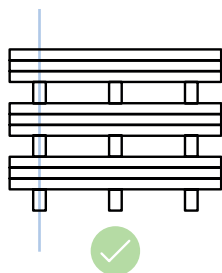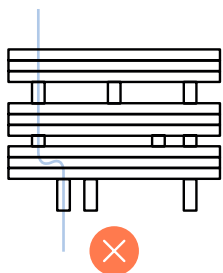

➤ Do not place the parcels next to open doors and keep them away from air flows.

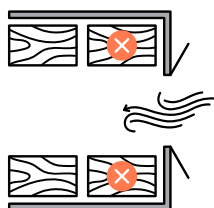


➤ Do not overlap parcels of different dimensions and check the vertical alignment of the spacers.

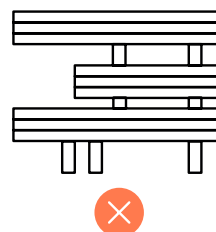


Storage instructions

At warehouse

✎ The top panel of the parcel could twist or bend because it's the most exposed to the air. Always put scrap panels above and below each parcel.

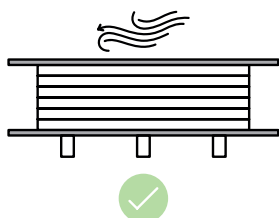

✎ Do not store panels vertically or against the wall.

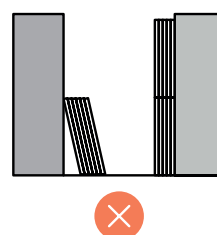

During process

✎ The equipment and industrial plants have to feature proper vacuuming systems for powders and wood shavings.

✎ Avoid powder accumulation in the working places.

✎ Handle the product wearing personal protective equipment and accident prevention devices.

✎ Maintain safe distance from open flames.

Other advices

✎ After the delivery of the goods it is recommended to wait some days before using them in order to facilitate a gradual balancing of humidity (from supplier - transport - carpentry).

✎ Long term exposure of the panel to sun beams can cause color alterations but do not affect the technical characteristics.

